


## REMOVAL

### HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

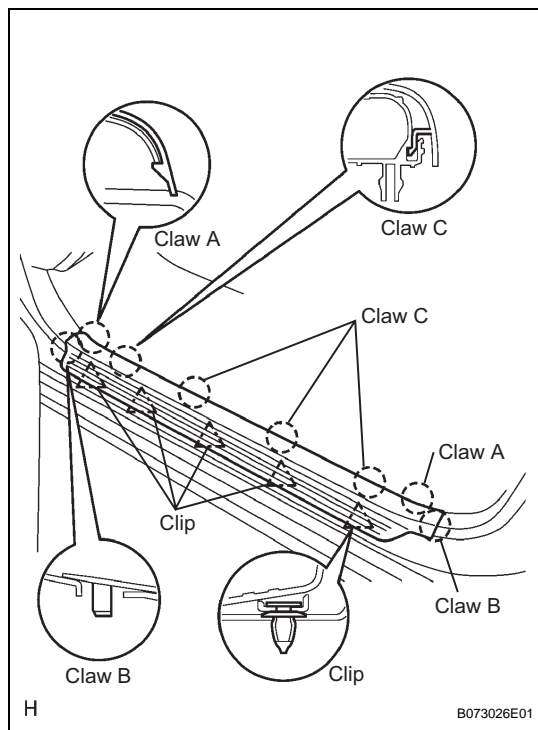

### 1. REMOVE FRONT DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the 2 claws labeled A, 2 claws labeled B, 4 claws labeled C and 5 clips, and remove the scuff plate.

#### HINT:


Tape the screwdriver tip before use.

- (b) Remove the 5 clips and scuff plate.

### 2. REMOVE FRONT DOOR SCUFF PLATE RH

#### HINT:

Use the same procedures described for the LH side.

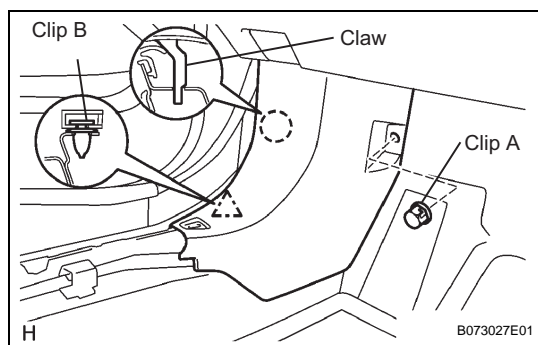

### 3. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH

- (a) Remove the clip labeled A.
- (b) Disengage the claw and clip labeled B, and remove the side trim.

### 4. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

#### HINT:

Use the same procedures described for the LH side.

### 5. REMOVE REAR SEAT ASSEMBLY

#### HINT:


See page [SE-40](#)

### 6. REMOVE FRONT DOOR WEATHERSTRIP LH

### 7. REMOVE FRONT DOOR WEATHERSTRIP RH

### 8. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH

### 9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH

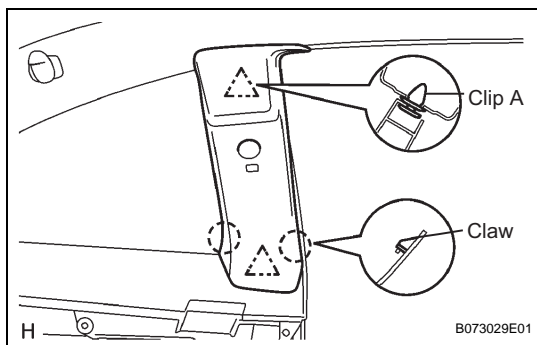

#### 10. REMOVE CENTER PILLAR GARNISH LH

- (a) Using a screwdriver, disengage the 2 claws and 2 clips, and remove the pillar garnish.


HINT:

Tape the screwdriver tip before use.

#### 11. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

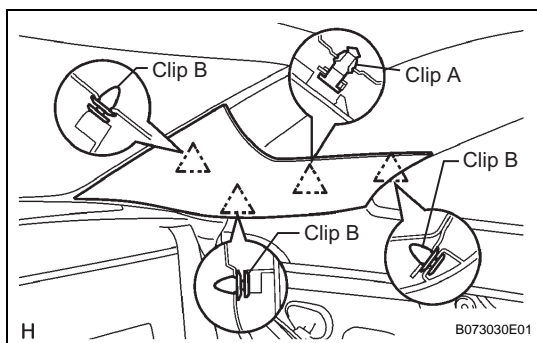

#### 12. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER LH

- (a) Using a screwdriver, disengage the clip labeled A and 3 clips labeled B, and remove the side garnish.


HINT:

Tape the screwdriver tip before use.

#### 13. REMOVE ROOF SIDE GARNISH ASSEMBLY INNER RH

HINT:

Use the same procedures described for the LH side.

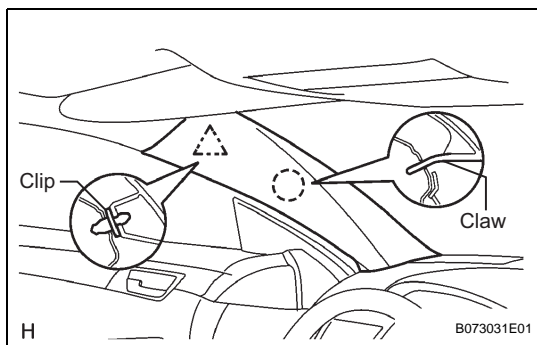


#### 14. REMOVE FRONT PILLAR GARNISH LH

- (a) Using a screwdriver, disengage the claw and clip, and remove the pillar garnish.

HINT:

Tape the screwdriver tip before use.

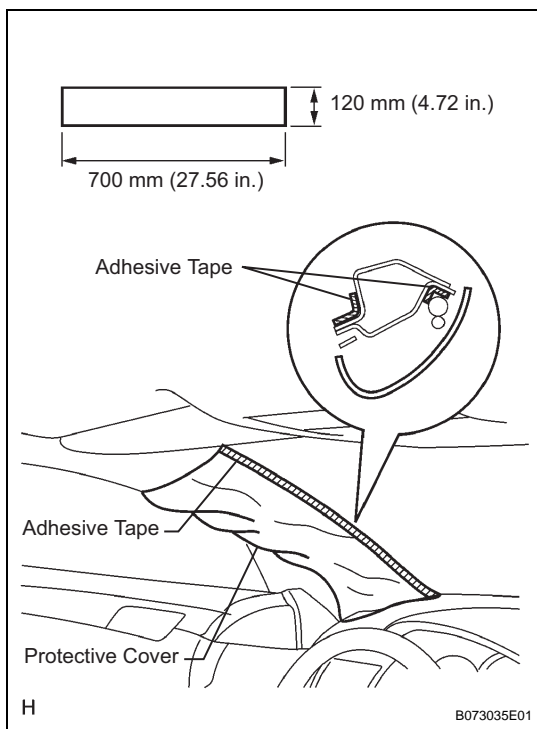

- (b) Pull the garnish upward and remove it from the instrument panel.

- (c) w/ Curtain shield airbag:

Protect the curtain shield airbag LH.

- (1) Cover the airbag with cloth or a piece of nylon approximately 700 mm (27.56 in.) x 120 mm (4.72 in.) in size. Fix the ends of the cover with tape as shown in the illustration.

**NOTICE:**

**Cover the curtain shield airbag with the protective cover as soon as the front pillar garnish is removed.**

#### 15. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

#### 16. REMOVE LH VISOR ASSEMBLY

- (a) Using a screwdriver, pry out visor cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and visor.

- (c) Disconnect the light connector.

**17. REMOVE RH VISOR ASSEMBLY**

HINT:

Use the same procedures described for the LH side.

**18. REMOVE ROOF CONSOLE BOX ASSEMBLY**

- (a) Using a screwdriver, disengage the 3 claws and 2 clips, and remove the console box.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the console box connector.

**19. REMOVE ROOM LIGHT ASSEMBLY NO.1**

- (a) Using a screwdriver, disengage the 2 claws and remove the lens cover.

HINT:

Tape the screwdriver tip before use.

- (b) Using a moulding remover, disengage the 2 claws and remove the room lamp.  
 (c) Disconnect the room lamp connector.

**20. REMOVE ASSIST GRIP SUB-ASSEMBLY**

- (a) Using a screwdriver, disengage the 6 claws and remove the 2 grip covers.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and 2 assist grips.

**21. REMOVE COAT HOOK**



- (a) Using a screwdriver, disengage the claw and remove the bolt and coat hook.

HINT:


Tape the screwdriver tip before use.

**22. REMOVE VISOR HOLDER**


- (a) Remove the visor holder by turning it counterclockwise.

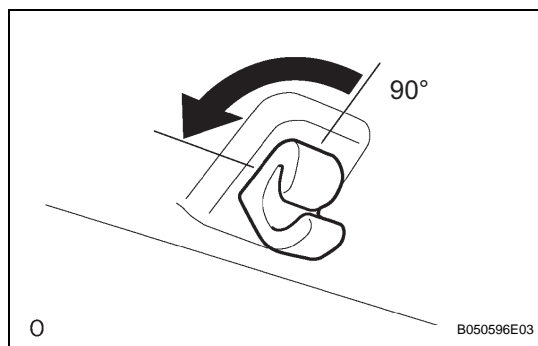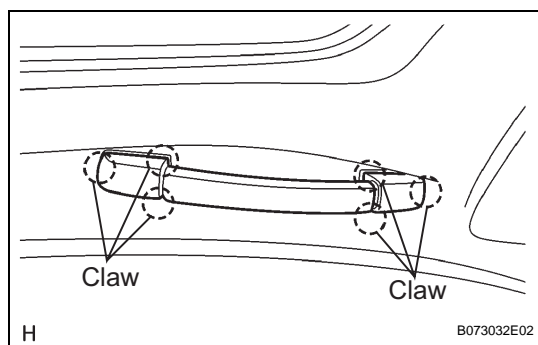**23. REMOVE SUN ROOF OPENING TRIM MOULDING (w/ Sliding Roof)**

w/ Sliding Roof

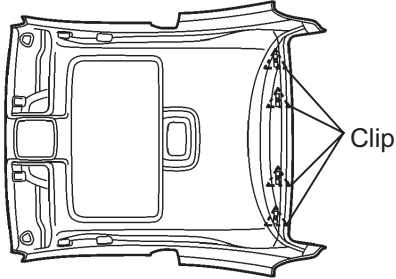

w/o Sliding Roof

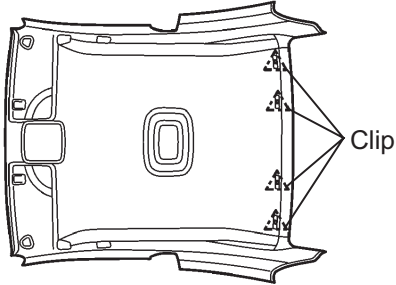

H


B073033E01

## 24. REMOVE ROOF HEADLINING ASSEMBLY


- (a) Using a clip remover, remove the 4 clips and roof headlining.

## 25. REMOVE ROOF HEADLINING PAD END (w/o Sliding Roof)

w/ Slidng Roof

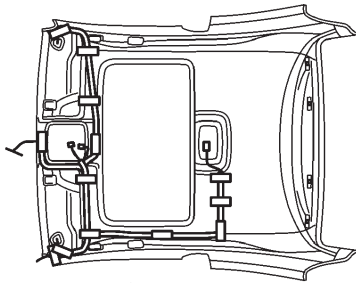

w/o Slidng Roof

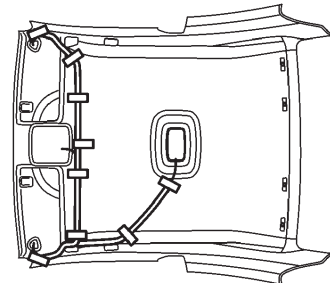

H

B073034E01

# INSTALLATION

## 1. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Align the markings, and then install the wire harness with tape.


### NOTICE:

**Attach the roof wire harness securely.**

- (b) Install the roof headlining with the 4 clips.


# ROOF HEADLINING (for Coupe)

## COMPONENTS

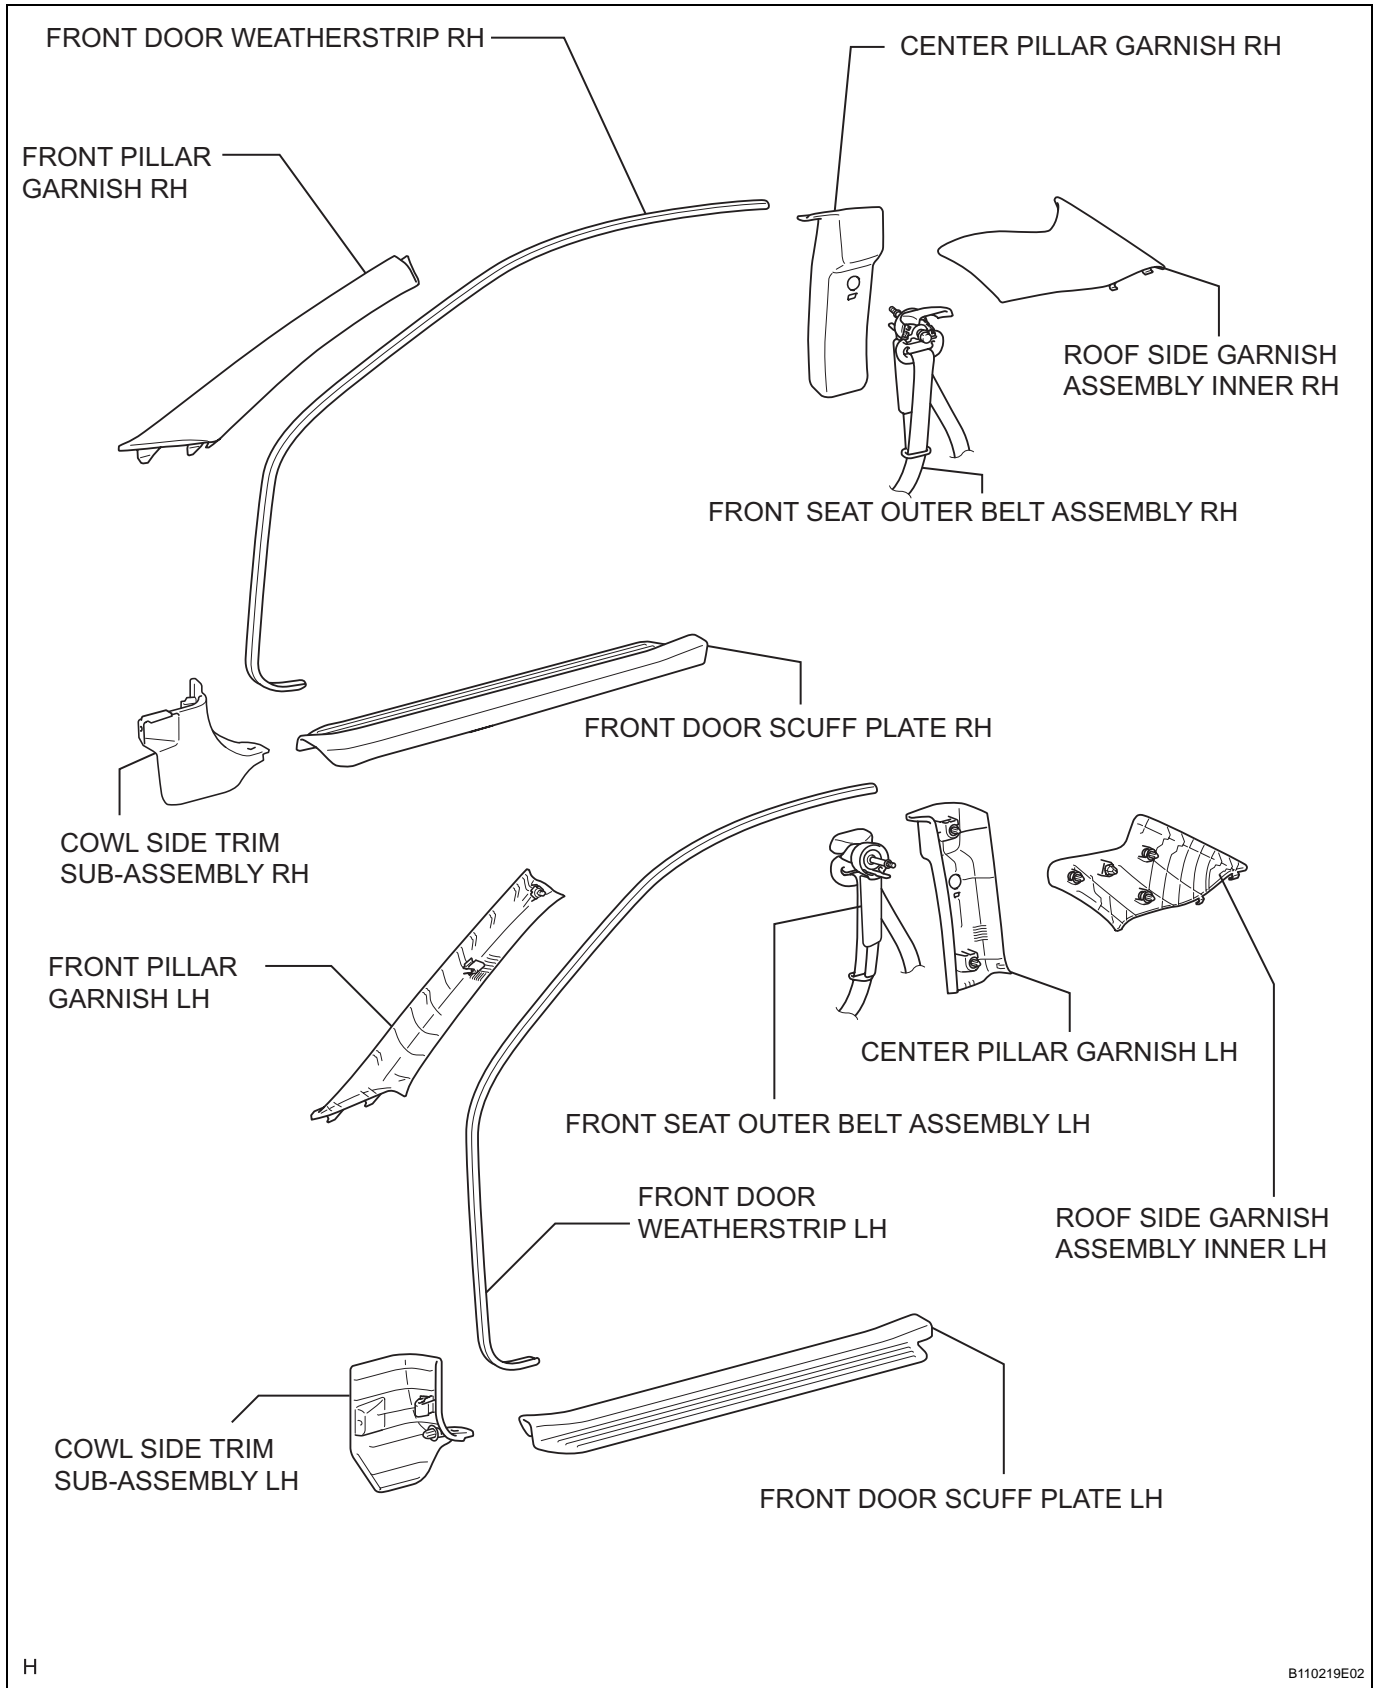


IR

W/ SLIDING ROOF:

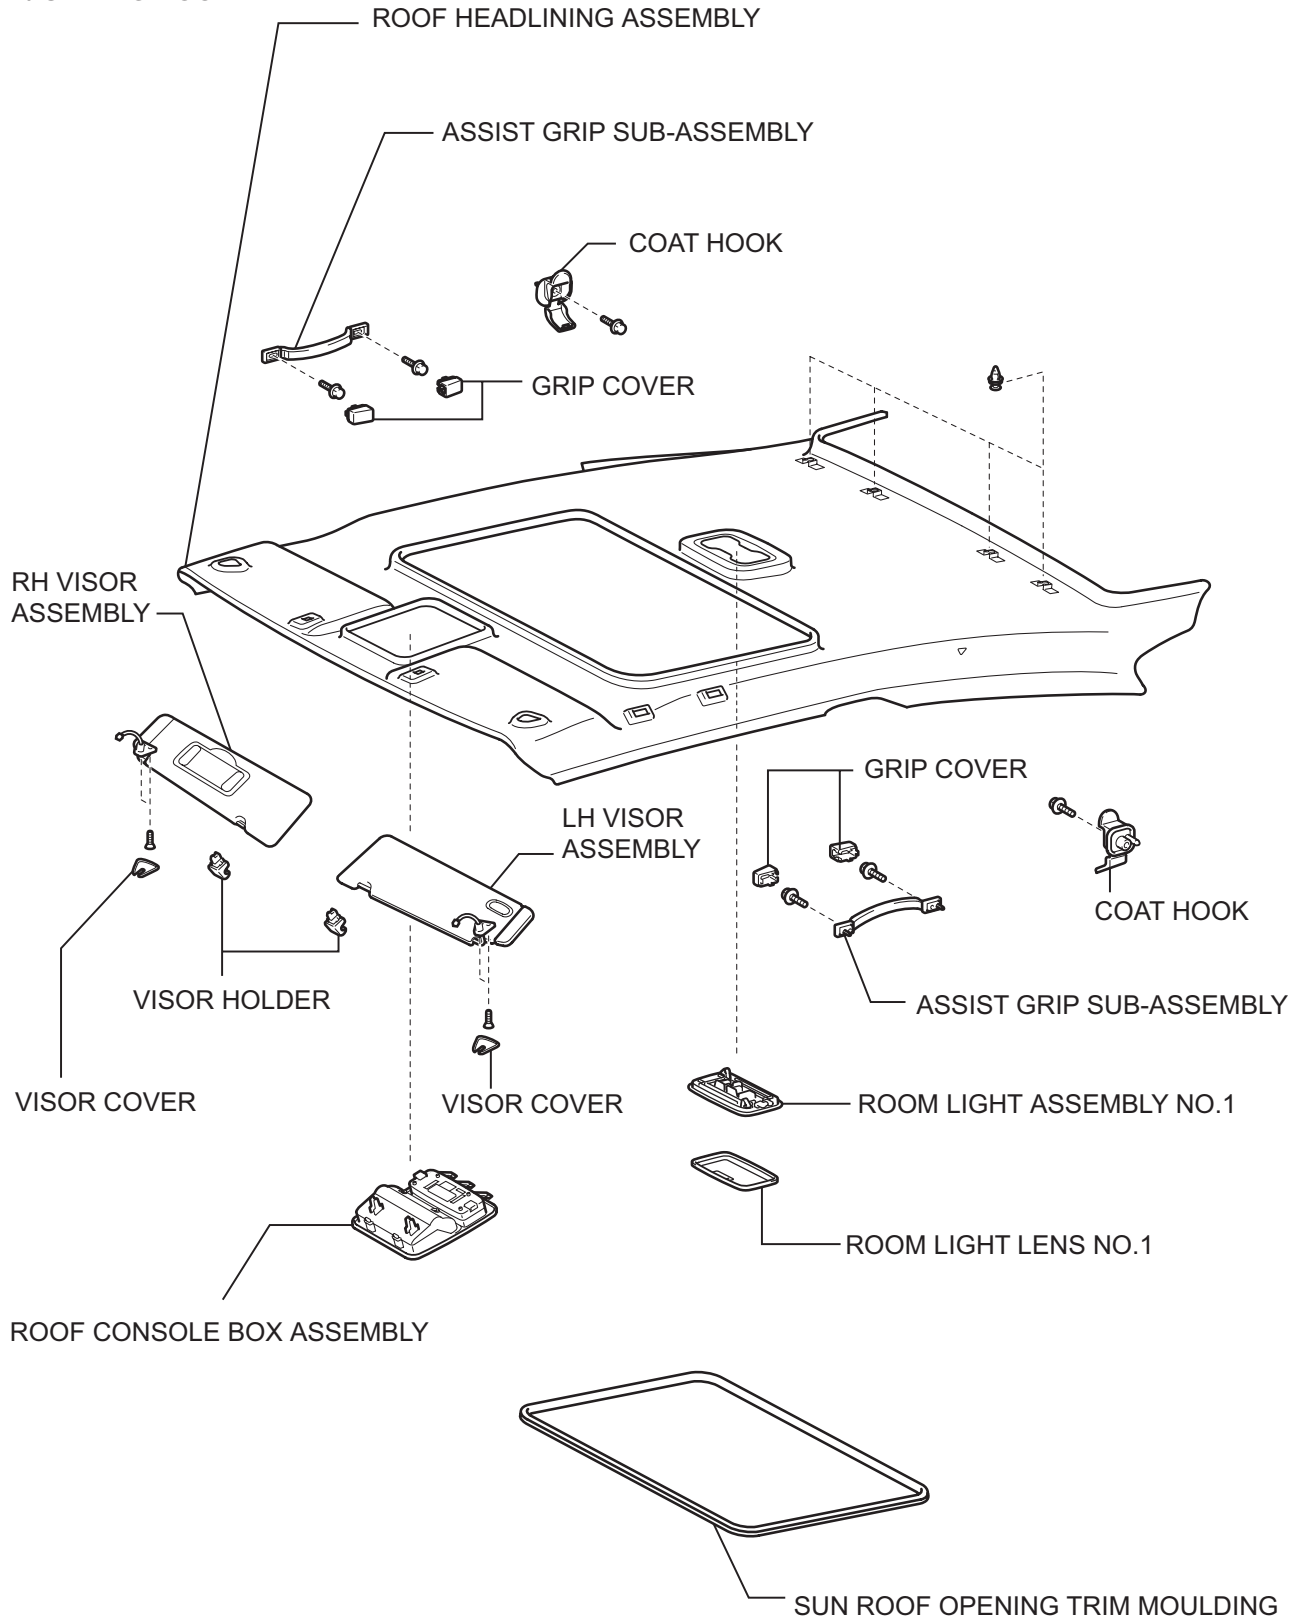

W/O SLIDING ROOF:

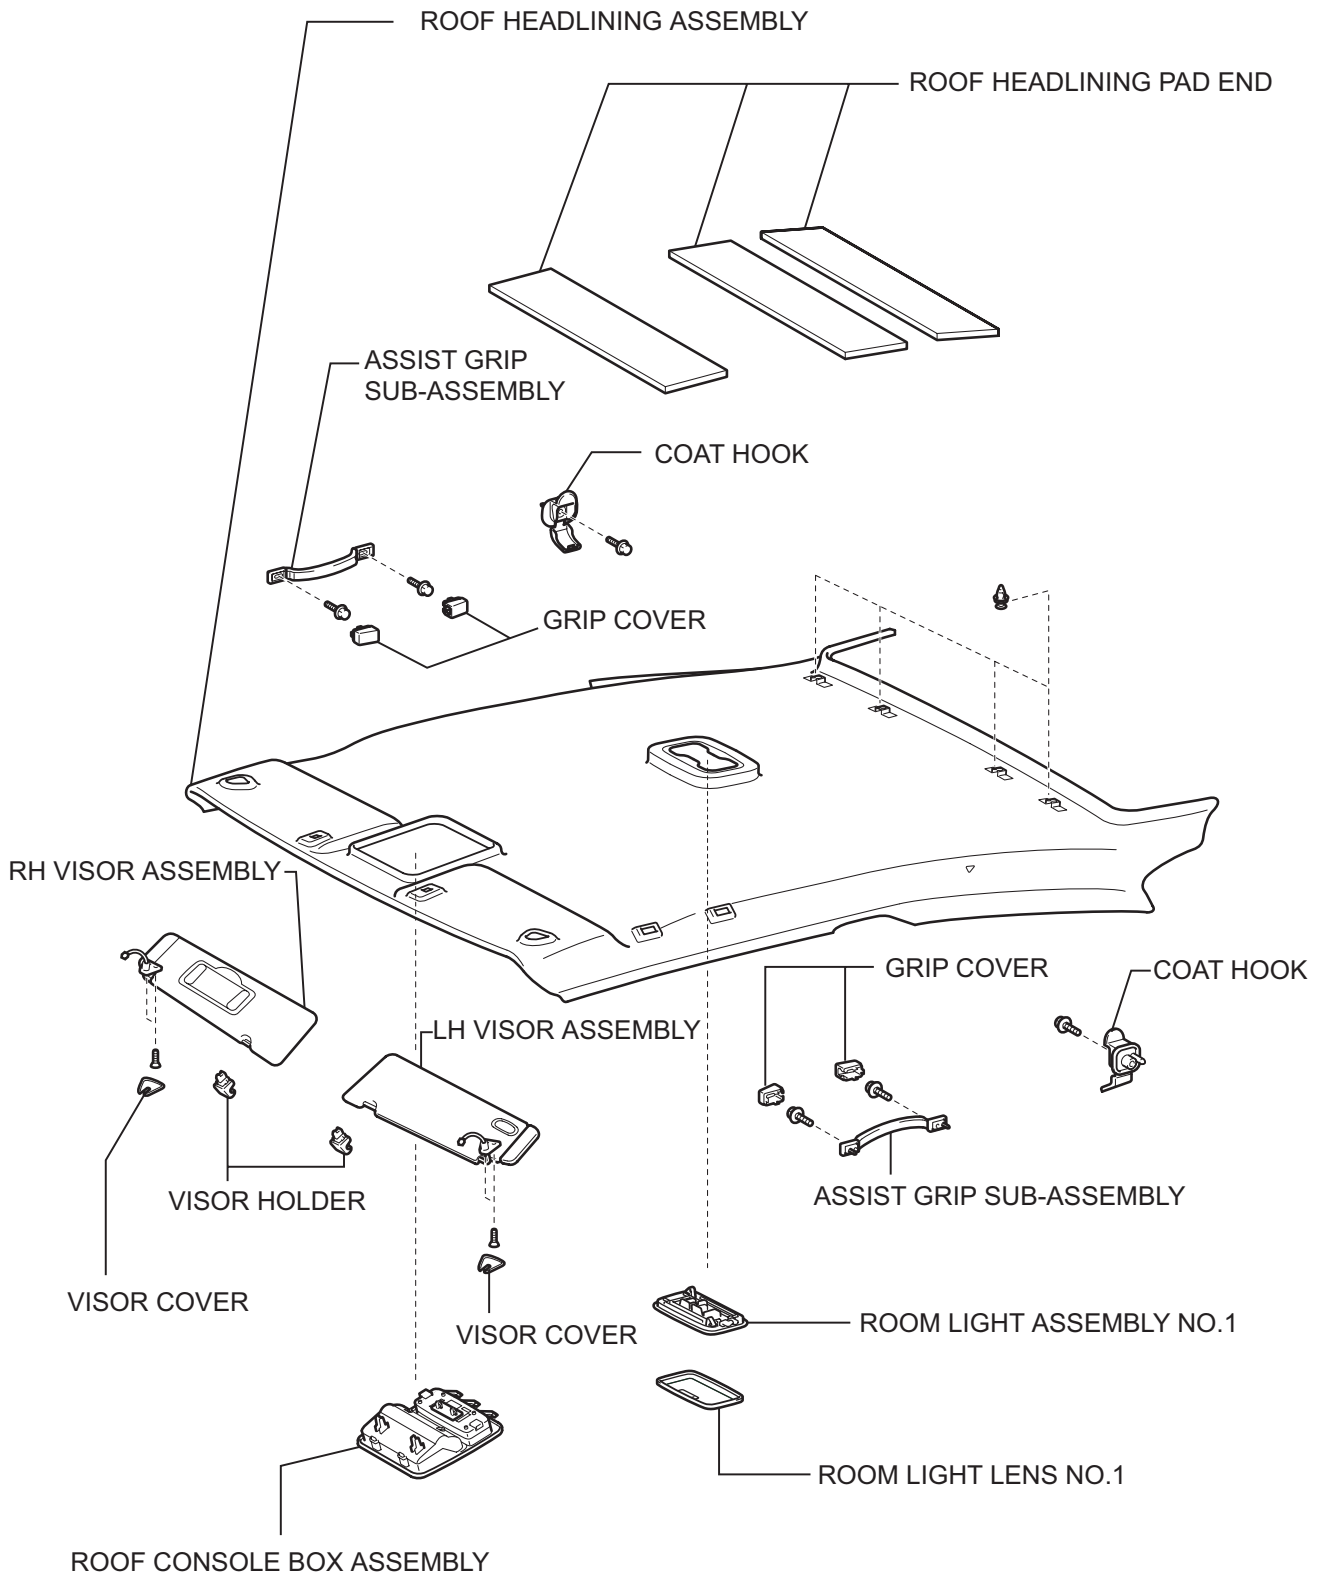


## INSTALLATION

1. INSTALL REMOVABLE ROOF WEATHERSTRIP FRONT
2. INSTALL ROOF HEADLINING ASSEMBLY
3. INSTALL MAP LIGHT ASSEMBLY
4. INSTALL VISOR HOLDER
5. INSTALL RH VISOR ASSEMBLY
6. INSTALL LH VISOR ASSEMBLY
7. INSTALL FRONT PILLAR GARNISH RH
8. INSTALL FRONT PILLAR GARNISH LH
9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH
10. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH
11. INSTALL QUARTER TRIM PANEL LOWER RH
12. INSTALL QUARTER TRIM PANEL LOWER LH
13. INSTALL QUARTER TRIM PANEL SUB-ASSEMBLY RH
14. INSTALL QUARTER TRIM PANEL SUB-ASSEMBLY LH
15. INSTALL CUP HOLDER NO.2
16. INSTALL CUP HOLDER NO.1
17. INSTALL FRONT SEAT OUTER BELT ASSEMBLY RH
18. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH
19. INSTALL CENTER PILLAR UPPER END WEATHERSTRIP RH
20. INSTALL CENTER PILLAR UPPER END WEATHERSTRIP LH
21. INSTALL REAR SEAT ASSEMBLY
22. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH
23. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH
24. INSTALL FRONT DOOR SCUFF PLATE RH
25. INSTALL FRONT DOOR SCUFF PLATE LH



# ROOF HEADLINING (for Convertible)


## COMPONENTS

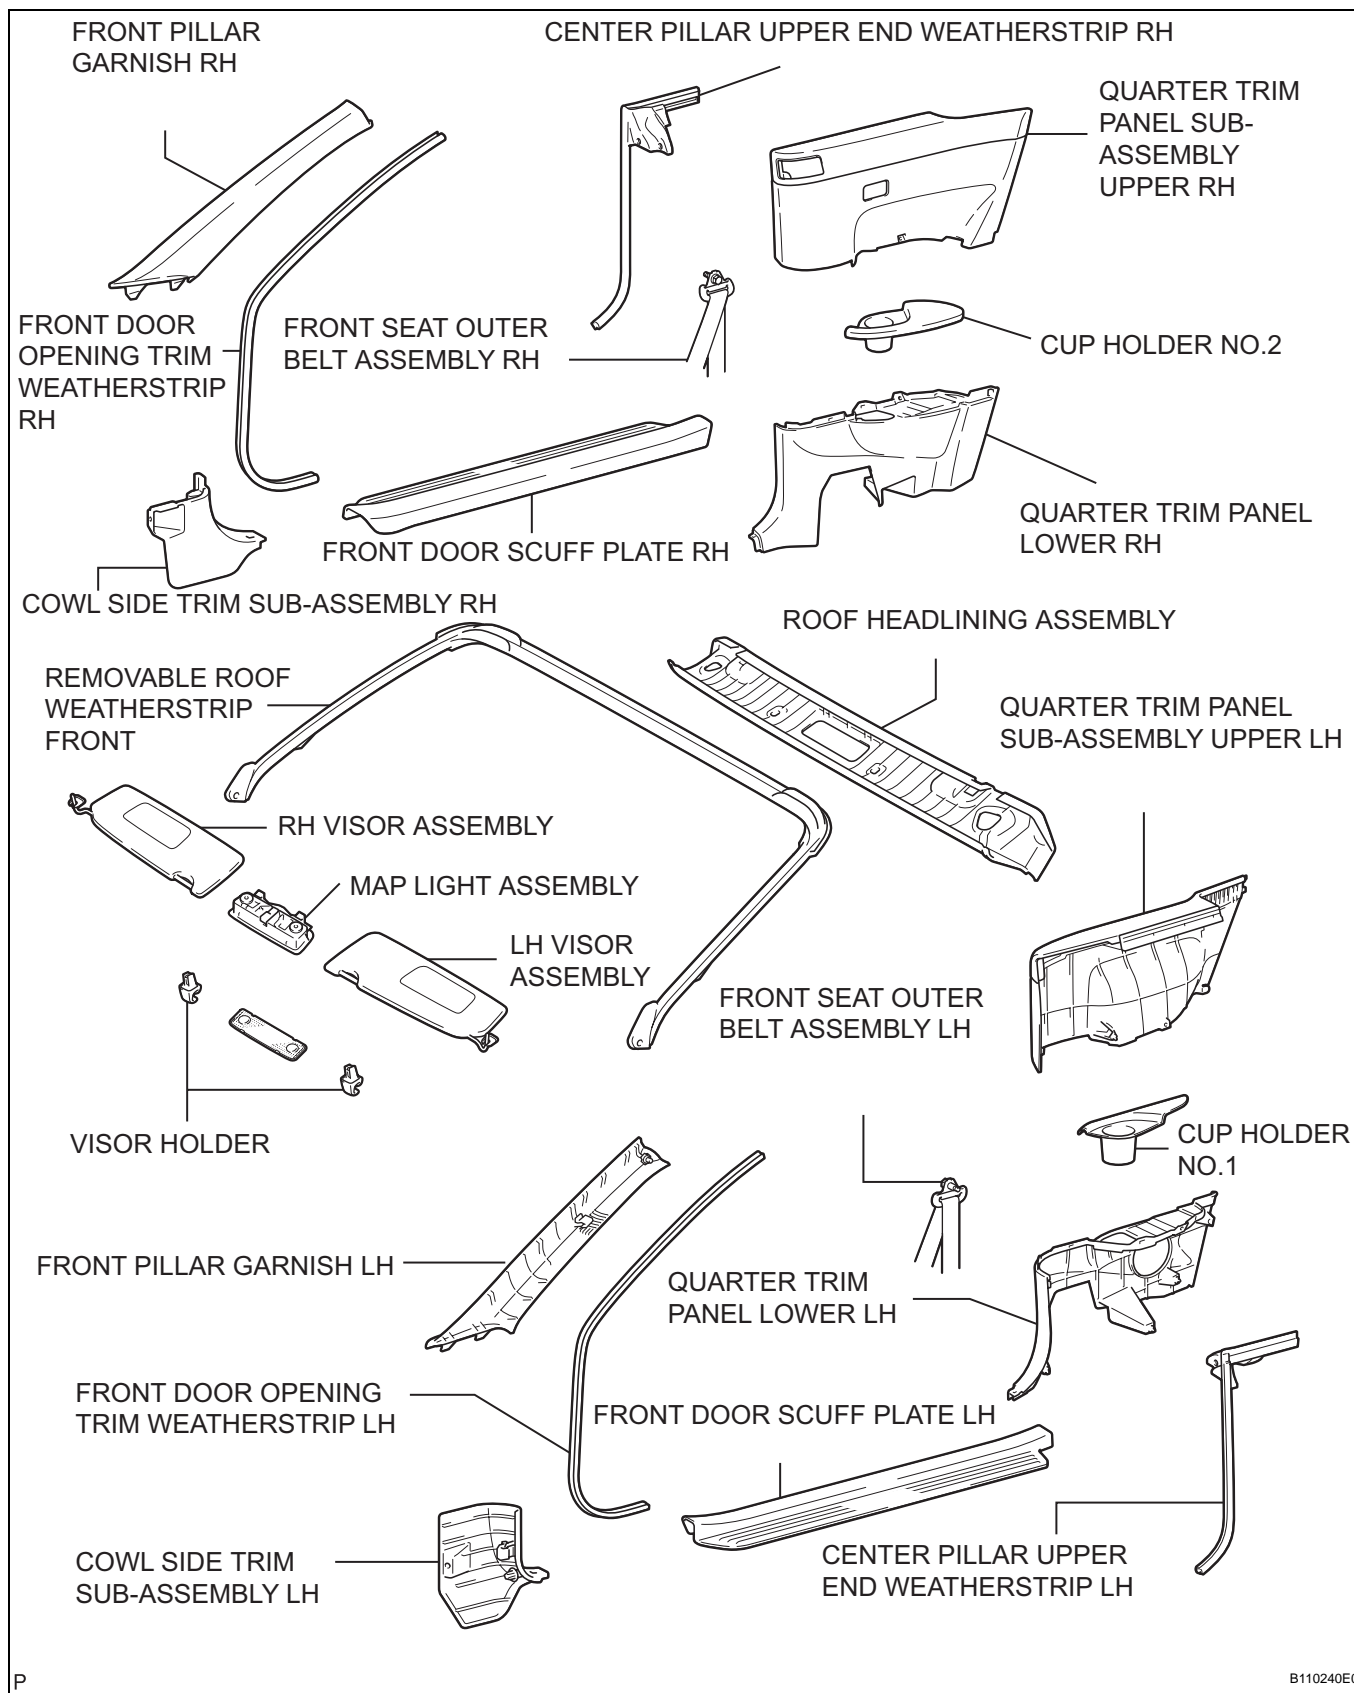

# REMOVAL

## HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

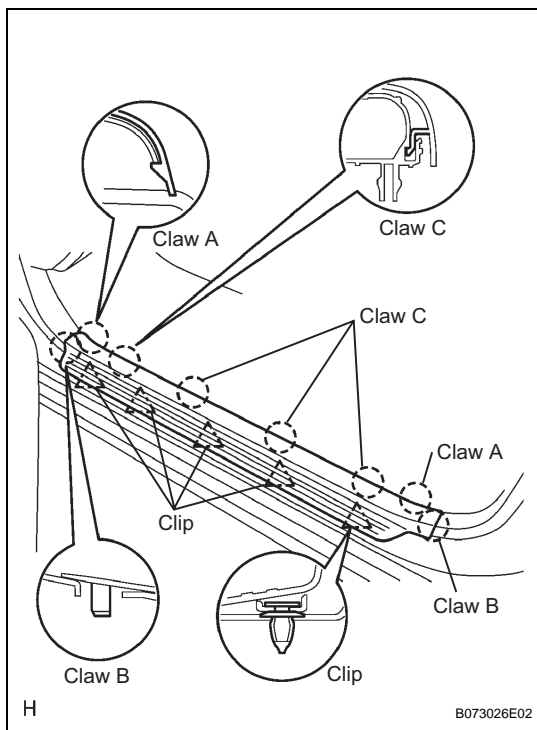

## 1. REMOVE FRONT DOOR SCUFF PLATE LH

- (a) Using a screwdriver, disengage the 2 claws labeled A, 2 claws labeled B, 4 claws labeled C and 5 clips, and remove the scuff plate.

### HINT:


Tape the screwdriver tip before use.

- (b) Remove the 5 clips and scuff plate.

## 2. REMOVE FRONT DOOR SCUFF PLATE RH

### HINT:

Use the same procedures described for the LH side.

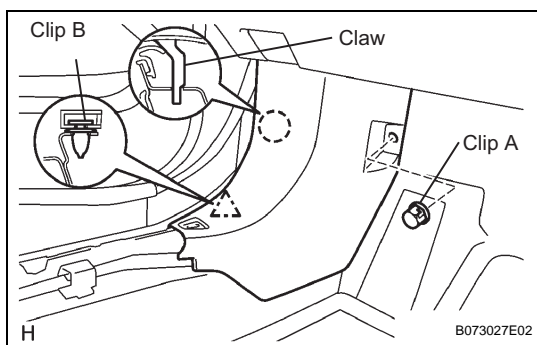

## 3. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH

- (a) Remove the clip labeled A.
- (b) Disengage the claw and clip labeled B, and remove the side trim.

## 4. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

### HINT:

Use the same procedures described for the LH side.

## 5. REMOVE REAR SEAT ASSEMBLY

### HINT:

See page [SE-46](#)

## 6. REMOVE CENTER PILLAR UPPER END WEATHERSTRIP LH

- (a) Using a clip remover, remove the 3 clips and weatherstrip.


## 7. REMOVE CENTER PILLAR UPPER END WEATHERSTRIP RH

- (a) Using a clip remover, remove the 3 clips and weatherstrip.

## 8. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH

### HINT:

See page [SB-21](#)

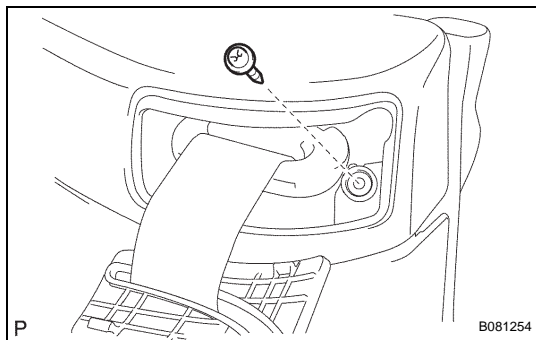**9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH**

HINT:

Use the same procedures described for the LH side.


**10. REMOVE CUP HOLDER NO.1****11. REMOVE CUP HOLDER NO.2****12. REMOVE QUARTER TRIM PANEL SUB-ASSEMBLY UPPER LH**

(a) Using a screwdriver, pry out the bezel.

HINT:

Tape the screwdriver tip before use.

(b) Remove the screw.

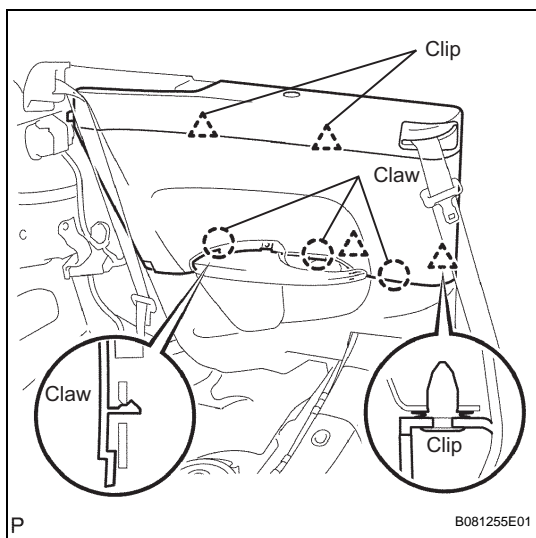

(c) Using a screwdriver, disengage the 3 claws and 4 clips, and remove the panel upper.


HINT:

Tape the screwdriver tip before use.

**13. REMOVE QUARTER TRIM PANEL SUB-ASSEMBLY UPPER RH**

HINT:

Use the same procedures described for the LH side.

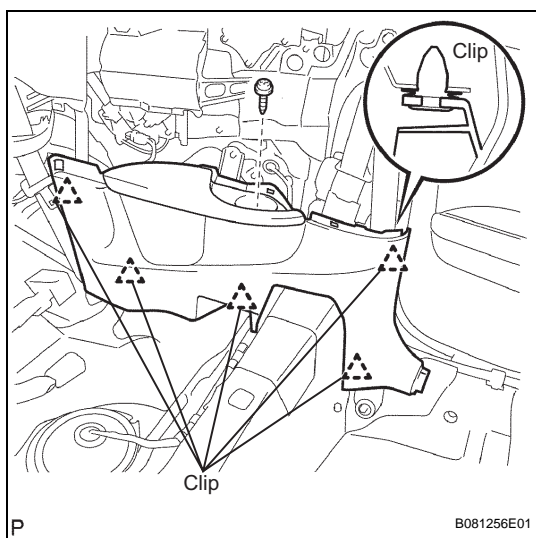**14. REMOVE QUARTER TRIM PANEL LOWER LH**

(a) Remove the screw.

(b) Using a screwdriver, disengage the 5 clips and remove the panel.

HINT:

Tape the screwdriver tip before use.

**15. REMOVE QUARTER TRIM PANEL LOWER RH**

HINT:

Use the same procedures described for the LH side.

**16. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH****17. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH****18. REMOVE FRONT PILLAR GARNISH LH (See page [IR-5](#))****19. REMOVE FRONT PILLAR GARNISH RH**

HINT:

Use the same procedures described for the LH side.

## 20. REMOVE LH VISOR ASSEMBLY

- Using a moulding remover, disengage the 3 claws and remove the cover.
- Remove the 2 screws and visor.



## 21. REMOVE RH VISOR ASSEMBLY

HINT:

Use the same procedures described for the LH side.

## 22. REMOVE VISOR HOLDER

- Remove the visor holder by turning it counterclockwise.

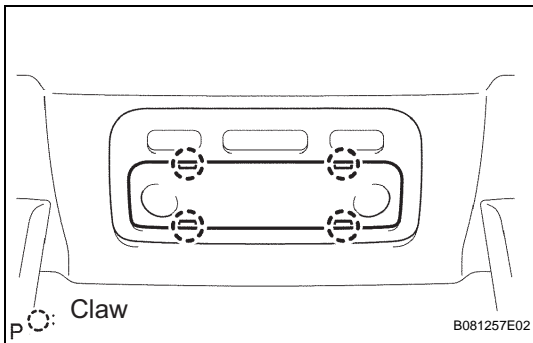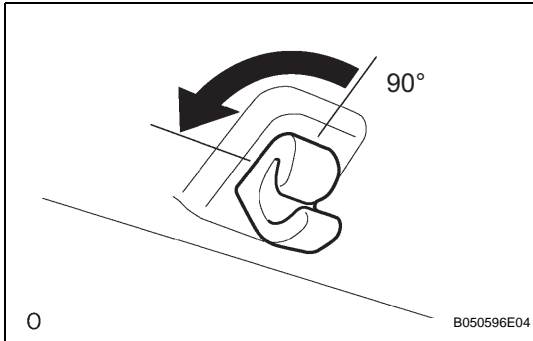


## 23. REMOVE MAP LIGHT ASSEMBLY

- Using a screwdriver, disengage the 4 claws and remove the lens.

HINT:


Tape the screwdriver tip before use.

- Remove the 2 screws and map light.

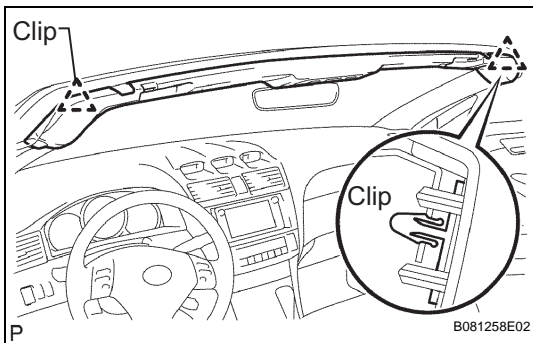

## 24. REMOVE ROOF HEADLINING ASSEMBLY

- Using a clip remover, disengage the 2 clips.

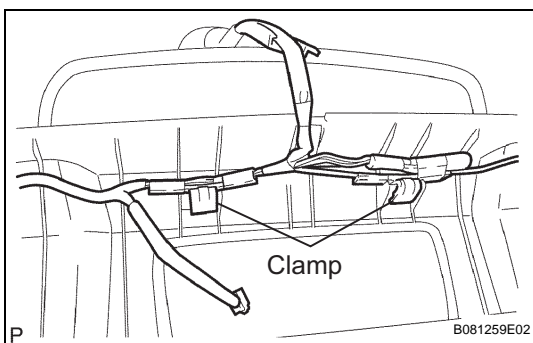

- Using a screwdriver, disconnect the wire harness from the 2 clamps.

HINT:

Tape the screwdriver tip before use.

- Remove the headlining.

## 25. REMOVE REMOVABLE ROOF WEATHERSTRIP FRONT